



## **DISPLAY UNITS / LIBRARY – Fixing the Wall Batten**

**PLEASE READ THESE INSTRUCTIONS RIGHT THROUGH BEFORE STARTING.**

**SOME EARLY STEPS MAY BE AFFECTED BY LATER ONES.**

These instructions are produced as a guide only.

You will require two people to handle the display unit furniture.

1. The batten provided with your column/unit maybe screwed to the back of the unit. Please remove this from the back of the unit to use correctly. You may be able to use the screws provided but please always check that they are appropriate with your wall construction at your local DIY store.
2. Which part of the cabinet will always be obscured by books, ornaments etc. or the back edge of a shelf?
3. Before starting any drilling works, please check the length of the batten and where the pre-drilled holes are drilled on the fixing batten, these may vary. Adjust the measurements below accordingly.
4. Drill 5mm holes at this height 40mm in from each side for an 11” column/unit and 65mm in for a 22” column/unit and 90mm in for a 33” column/unit.
5. Move the cabinet away.
6. At a height coinciding with the fixings holes drilled in the back, fix the wooden batten to the wall with two large screws and plugs. Please contact your local DIY store for assistance on the most appropriate fixing for your wall construction.
7. On a plasterboard wall, if you cross a vertical stud, drill a hole in the batten where it crosses the Stud. One screw into the Stud is sufficient.
8. Move the cabinet into position and level it up.



## **DISPLAY UNITS / LIBRARY – Fixing the Wall Batten**

9. Use the adjusters behind the top to move it backwards to line up with wall fixed units.
  
10. Screw the cabinet to the batten through the holes in the back, using the appropriate screws. Do not over tighten.